

Portable fashion sports HD camera user's manual

Please read this user guide carefully before use



clock

The clock is always on after the machine finished. Press the power button to display the time (the display mark is in the upper left corner) and turn off after 10 seconds. It will shut down automatically after 15 minutes .

Power on

Press and hold the power button for 3 seconds, then release, the logo in the upper left corner of the screen disappears and enters the standby state.

Recording function

During standby state:

Recording : long press camera/recording button , The screen has a microphone (or triangle) logo to start recording;

Saving : press camera/recording button lightly , The microphone (or triangle) mark on the screen disappeared, the recording is saved, and return to standby state.

Camera function

During standby state:

Recording: press the Camera/Record button, and the camera will display the camera (or circle) mark to start recording.

Saving: press the Camera/Record button lightly, the screen capture (or circle) mark disappeared, the recording is saved, and return to standby state.

Photo function

During standby state ,

Photo : press the photo button, the screen will show the photo logo then disappear, take the photo and save the image. And return to standby state.

Power off

Press and hold the power off button for 3 seconds. After releasing the hand, the screen will display the mark and enter the clock state.

Timing setting

Synchronize machine time and record the time of recording.

Method 1 :



1.Connected the recorder with the computer, found out (the machine exists by default) or creates a text document named "time" (.txt) from the recorder

2. The content of the file, written at the top, without spaces.

For example: Original time:2017-06-12,23:59:59

change to need time:2018-01-12,23:59:59。


Change the contents of the file as shown and turn it off after saving;

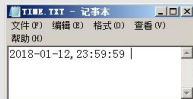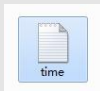

3. Disconnect the computer, the machine will read the changed time automatically after the machine is turned off, and the time will be kept in the modified time. (After the machine system reads the time, the content of the document will be restored to the original time: 2017-06-12, 23:59:59) The machine needs to be reset after a long period of no power.

Method 2: 1. Connect the recorder with the computer, find the <JNN recording time synchronization tool.exe> in the machine; 2. Copy the file to the desktop for backup, then double-click the left button to open the synchronization tool, as showing .Then click Exit to exit;

3. Disconnect from the computer, the machine is turned on and off for one update time. In the case of constant power, the modified time will be maintained, and the machine needs to be reset after a long period of time.

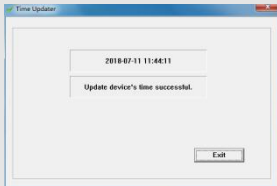

Charging (precautions)

During the charging of the recorder, the screen displays charging; after the battery is fully charged, the battery is fully charged and stops beating.

Tip: If the machine is not charging for too long, the battery is too low, please use the charger to charge, other things can be charged by the computer.

Data Connections

Connect to the computer through the data cable to read the data.

Function parameter

product type	Camera recorder	battery	Environmentally friendly polymer lithium battery
Recorder time	Self-synchronization	Voltage	3.7V
Charge time	around 2 hours	battery capacity	300mAh
photo format	JPG	Photo resolution	1920*1080
camera format	AVI	Camera resolution	1920*1080 30 frames/second
Lens parameter	F/NUMBER 2.25	FOV	65 degrees OV9732 SENSOR

Warranty card

Product Model :

Warranty Period :

Cause of issue :

Distributor :

Telephone :

Name :

Telephone :



☆Attention:

Do not leave the watch recorder over heated or in high room temperature.