

Small Digital Voice Recorder

User Guide

Please Read Carefully Before Use



Buttons and Functions

- ① “+” **Button**: Next Song / Volume Increase (Press and hold) / Noise Reduction
- ② “-” **Button**: Play Mode Switch / Volume Decrease (Press and hold) / Auto Record
- ③ **Power Switch**, ON / OFF
- ④ **USB / Charging / Headphone Port**
- ⑤ **Indicator Light**



Instructions

POWER ON / OFF: move Power Switch to “ON” (will start recording) and “OFF” position.

HOW TO RECORD: move Power Switch to “ON” position, the Indicator Light will turn red and blink 3 times, then the device will start recording.

***Note: the device cannot record if headphone is plugged in.**

HOW TO SAVE RECORD FILE: when recording, move Power Switch to OFF position, the Indicator Light will turn red and blink 1 time before go off, then the record file is automatically saved.

HOW TO PLAY RECORD FILE / MUSIC FILE – PLAY MODE: plug in headphone into Headphone Port and Power ON, the device will enter Play Mode and play your record file; press “-” button can switch to Music Mode to play your MP3 music file.

***Note: the device can only play record / music file when headphone is plugged in; you can also view, play, copy record / music file when connect to PC**



Instructions

HOW TO PLAY NEXT RECORD / MUSIC FILE: when playing in Play Mode, press “+” button will play the next record / music file.

VOLUME + / -: when playing in Play Mode, press and hold “+” button to increase volume, press and hold “-” to decrease volume.

CHARGING: move Power Switch to “OFF” position and connect the device to power adapter or computer to charge. The Indicator Light will keep blinking until the device is fully charged.

***Note: please power off the device before charging.**

NOISE REDUCTION: move Power Switch to “ON” position, then press and hold “+” button until the red Indicator Light goes off will enable Noise Reduction.

AUTO RECORD: move Power Switch to “ON” position, then press “-” button until the red Indicator Light goes off will enable Auto Record. When surrounding sound is loud enough, the device will start the recording automatically.

***Note: you have to enable Auto Record every time after the device is power off.**



Instructions

HOW TO DELETE FILE: when playing, press and hold " + " - " buttons together to enter Delete Mode, and the Indicator Light will turn purple.

- **Delete Single File:** in Delete Mode, press " + " or " - " button will delete current file, the Indicator Light will turn blue and blink fast.
- **Delete All Files:** in Delete Mode, press and hold " + " - " buttons together to delete all files, the Indicator Light will turn red and blink fast

***Note: to prevent deletion mistake, we highly recommend you to conduct file deletion when connected to PC.**

FAST FORWARD / BACKWARD: move Power Switch to "ON" position and plug in headphone, the Indicator will turn red; press and hold " + " - " together until the Indicator Light turn blue or purple and blinking to enter Fast Forward / Backward Mode; in Fast Forward / Backward Mode, press and hold " + " to fast forward, press and hold " - " to fast backward.



Instructions

CHARGING WHEN RECORDING: move Power Switch to "ON" position and connect USB cable to charge the device, press and hold " + " - " together until the Indicator Light goes off, the device will start the recording when charging.

MONITOR RECORDING: move Power Switch to "ON" position (make sure the headphone is not plugged in), press and hold " + " - " together until the Indicator Light goes off, then plug in headphone, you can listen to the current recording.

CHECK RECORDING STATUS: when recording, press and hold " + " - " buttons together, if Indicator Light turn red and blink 1 time, the recording in in progress.

RESTORE FACTORY SETTING: move Power Switch to "OFF" position then connect the device to PC, right click the recorder's disk icon and start formatting will restore the device to factory setting.



Instructions

SPECIFICATIONS:

| | |
|----------------------------|--------------------------|
| Battery Type: | Build-In Lithium Battery |
| Recording Output Format: | WAV |
| Supported Music Format: | MP3 / WMA / WAV |
| Default Recording Quality: | 192Kbps |
| Charging Time: | about 1~2 hour |
| Memory Size: | 4G / 8G / 16G |