 


User' s Manual

Appearance and buttons:

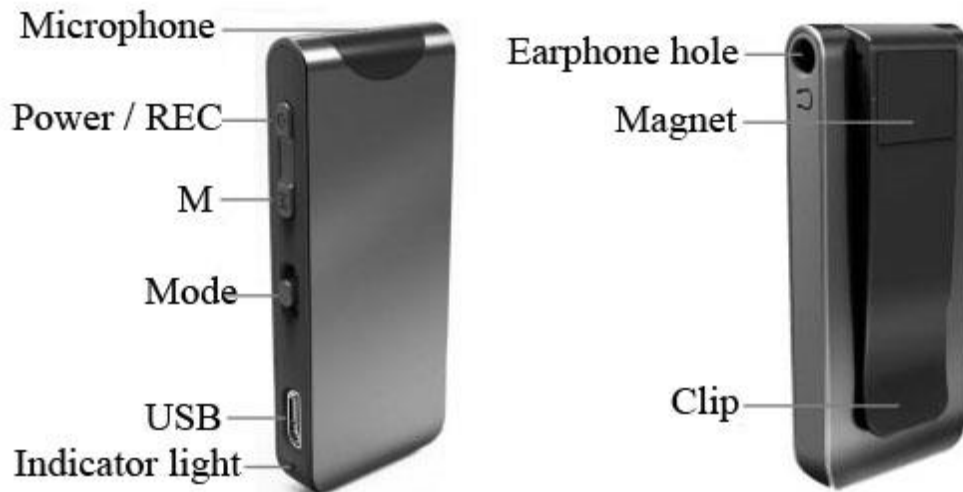




Main functions:

- 1024Kbps PCM high fidelity recording
- Recordings & Music playback, FM Radio
- Playback through the drive-by-wire earphone
- Time-setting
- Built-in high sensitive microphone
- With clip and magnet
- Automatic section-break
- Automatically save recording files when battery is low
- USB data transmission & charging, Recording and Charging simultaneously




Operations:

- ◆ Turn on/ Turn off/ Reset

Long press  button about 2 seconds, the indicator light becomes red and it means the recorder is turned on. Re-press the  button about 2 seconds, the recorder turns off. If there is no response when press the buttons, long press  button about 15 seconds, it can reset the device.

◆ Record Mode

Push the " Mode " button to position " I " , the recorder will start to record voice once it's turned on, and the blue indicator light will go out after five times flashes.

Press  button during recording , the blue indicator light will flash again. While the blue indicator light flashes, press  button to pause and save the recording file. and re-press  button to start another recording.

Press the "M" button to switch between 1024kbps and 192kbps mode. (When the Sample Rate is 192Kbps it means voice activated recording. The speed of indicator light flashes at 192kbps is a little slower than it ' s at 1024kbps)


The recorder will automatically save the recording file after two hours continuous recording, and then start to record next file.

When you plug in drive-by-wire earphone during recording ,

press "+" or "-" button on earphone to adjust the volume for monitoring the recording.

◆ Playback Mode

Push the " Mode " button to position " II " ,the recorder will start to play recording files once it's turned on, and the blue indicator light will be always bright. When press the "M" button, the Recording files and Music can be switched with each other.

In the playback state, press  button or the "play/pause" button on drive-by-wire earphone (between "+" "-") to pause, repress to play again.


In the playback state, short press "+" or "-" button on drive-by-wire earphone to adjust the volume. Long press "+" or "-" button to rewind or forward fast.

In the paused state, short press "+" or "-" button on drive-by-wire earphone to switch previous and next file.

In the playback state, long press the "M" button can delete the current played file, and at the same time the blue light will flashes.

◆ FM Radio

Push the “Mode” button to the position “III” ,the recorder will enter into the FM Radio.


During the FM radio process,short press "+"or "-"button on drive-by-wire earphone to adjust the volume,long press “+” or “-” for automatic scanning,the recorder will automatically save the channels.Press  button or the "play/pause" button on drive-by-wire earphone (between "+" "-") to shift the channel which you saved,long press "M" button to delete the current channel.

Attn: Please insert the drive-by-wire earphone into the recorder when you slide the “Mode” button to position “III” .

◆Charging

During the working process of the recorder,when the red indicator light twinkling means the battery is not enough,please connect the recorder to the computer to charge in time.During charging,when the red indicator light twinkling means the charging is not finished,and vice versa .When its fully charged,it can continue recording about 30 hours at the recording bit rate of 192Kbps,about

12 hours at the recording bit rate of 1024Kbps, about 4 hours at the FM Radio.

The way of Recording and Charging simultaneously: please press “M” button when the recorder connect to the computer, then the “Removable Disk” icon will disappear and then press “” to record while charging.

◆Time-setting

Please connect the recorder to the computer and create a “txt” file in the folder named RECORD. The format and the content of the file must includes the date and time, such as 20160601103030 (It means in Jun. 1st 2016 at 10:30'30'') , then save it. Please make sure the “year” must be four digits and the others be two digits. After you done it, the time setting is successful.

◆Precautions:

In order to avoid accidents, please read user’ s manual carefully before operations.

1. Please don’ t put the recorder at the place where is in the high temperature、damp or dust situation.

2. Please handle the recorder carefully, avoiding strong

collision or fall.

3. Please backup files regularly on the computer to avoid data loss which may be caused by wrong operations or breakdown of the machine.

4. We are not responsible for the recording failures which caused by wrong operations or damage of the recorder.

5. Please do not disassemble or replace the inner parts by yourself. Please backup files before sending for repair. We are not responsible for the information loss which caused by maintenance.

6. We are not responsible for the user's recording without others's approval.

7. We endeavor to ensure the manual's integrity. For technical and other reasons. if the contents do not match , please take recorder as standard.

Size: 57mm*24mm*10mm	Weight: 16g
Power Supply: Polymer Battery 3.7V 120mAh	
Recording Format: WAV, 192Kbps/1024Kbps	
4GB Recording Time: about 47 hours/about 9hours	
8GB Recording Time: about 94 hours/about 18hours	
16GB Recording Time: about 188 hours/about 36hours	

Support System: Windows2000/XP/Vista/7/8/10