


Video Doorbell User Manual


Wi-Fi · 720p HD · Two-way Audio

V1.0

The Basics

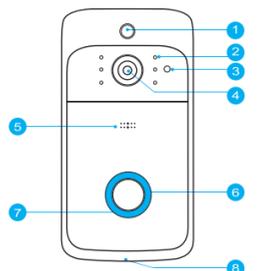


- 1. PIR Motion Sensor
- 2. Infrared LED x 6
- 3. Light Sensor
- 4. 166° HD Camera
- 5. Microphone
- 6. Push Button
- 7. LED Indicator
- 8. Speaker

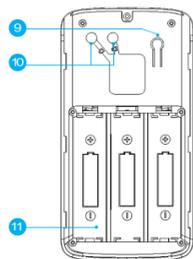

- 9. Reset Button
- 10. AC Input
- 11. Battery Compartment
- 12. TF card
- 13. USB Interface

1

Mounting Bracket

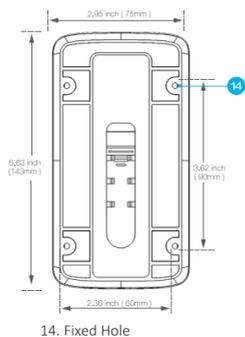

14. Fixed Hole



In The Box



2

Installation Guide

As shown in the figure, take back

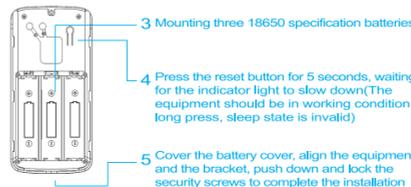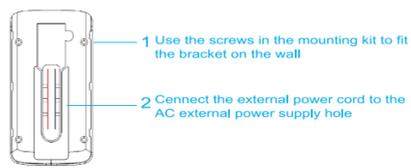

Setup Device

Thank you for choosing our products! Please follow the below instruction to setup and using your doorbell device.

1. Downloading and Installing the App

Open the App Store (for iOS) or the Google Play Store (for Android) on your mobile devices. Search for "XSH cam" or scan the following QR Code to download and install to your device.



3

2. Setting up the App

Before you begin...

- > Make sure the Ubell app is installed to your device.
- > Make sure that your device is connected to a 2.4GHz Wi-Fi network, NOT a 5GHz network.

Add the camera

- 1) Open the app on your device and tap Add a Camera.



Setup the Camera

- 2) Select Setup Camera. Note: If you have multiple cameras, only setup one at a time.



- 3) Before setup, make sure the device is in configuration -- with a voice prompt "The camera is now ready to begin pairing".



- 4) If you didn't hear the voice prompt, press and hold the reset button for 5 seconds. Release after the LED indicator turned off, and the device will restart to configure automatically.



- 5) The will automatically be filled in, enter the Wi-Fi password. And adjust the volume of your device to a reasonable level then tap "Next". The APP will fill the corresponding password automatically if connected with the same Wi-Fi, and you don't need to fill the password again.



4

- 6) The mobile device will emit sound waves, keep quiet and make sure about 30cm distance between the phone and the device, and waiting for the device to configure the network. If it fails to connect, reset the camera and repeat all the steps (please see the previous section, Resetting the Camera)




- 7) After a successful connection, you will be prompted to create a name and password for your camera. The password must be at least 8 characters and include an uppercase letter, a lower-case letter, and a number.

- 8) Setup completed! The APP will be entered the device list interface automatically. Congratulations! The device is ready for use.

3. The Wi-Fi Doorbell Features

In the device list section, please click settings icon which at the top right corner to enter the device settings.

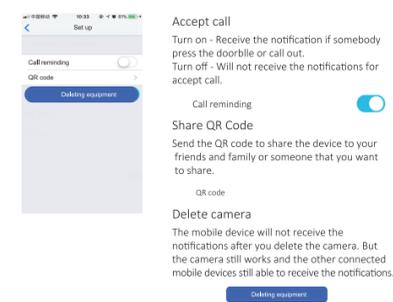

5

4. PIR Detection Instructions

The device can support the PIR detection. Tap "PIR detection" to open the submenus.




- Disabled** - Close the PIR function.
- Low** - The device will be able to wake up after device detects human for 7 seconds. Device start to take videos and call the mobile device at the same time.
- Medium** - The device will be able to wake up after device detects human for 5 seconds. Device start to take videos and call the mobile device at the same time.
- High** - In the state, the device will be able to detect if keep the state what be detected at least 1 second, and the device start to take videos and call to phones at the same time.

5. Cloud Storage

In the XSHcam APP setting menu, choose storage management, and open Cloud Storage

At the bottom of the preview menu, the "Switch" button in the panorama mode becomes the "Cloud Storage" button

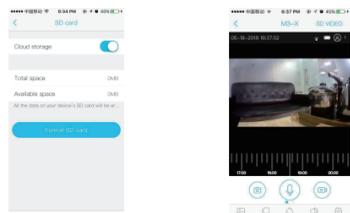


Cloud Storage Description: When the device is in sleep state, when PIR triggered or the doorbell button was pressed, the device will automatically upload 10 seconds of video to the cloud. Each device can record 20 events per day, and provide a week of loop recording space and Traffic for users

Tap the calendar icon in the upper right corner and select the date to see all the cloud videos for the selected date

Click on the event video to see the cloud video

6

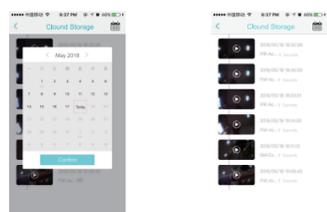

Note: In crowded environment, it is recommended to close or set the device to low sensitivity to reduce device arousal and call times to extend battery life.

6. Note for using

- 1) The device is powered by rechargeable lithium batteries. With fully charged, the battery life approx be six months. The mobile device APP will be prompted while the battery voltage is low. Please charge the device after received the reminder.
- 2) Keep the camera in range of your router. Make sure to pick a place within range of your network. Thick or insulated doors can greatly reduce the strength of your Wi-Fi signal even if your router is close by, so you should try streaming video before you mount your camera.
- 3) The device is a low power consumption intelligent products, can support remote wake up from the APP, PIR human detection, press doorbell wake up. The device will be works for 30 seconds after wake up then be in the resting state automatically and until to next waking up.

Technical Specification

Resolution	1280 * 720
Field of Angle View	166°
IR LED	6 * 850mm
Wi-Fi	IEEE 802.11 b/g/n
Audio	Two-way talk with noise cancellation
Recording	Device SD Card recording (20 seconds)
Storage	Cloud storage or 8G/16G/32G TF Card
Battery	Two 18650 specification batteries
Device Wakeup	Device Button, Motion Detection, Remote Live View
Power Consumption	Three pcs 18650 lithium battery
Monitoring	Within 600 ms
Notifications	Power Consumption Standby 200 uA, Working 170 mA

- 1 Three 18650 specification batteries, work regularly for 9 months.

7


Wireless Chime (Optional)

Connect the video doorbell to the doorbell chime, and get instant alert in your home when someone rings the doorbell. Hear the doorbell chime when you are home, without checking your video doorbell app! The chime plugs into any wall outlet, you can place it anywhere in the home.

NOTICE:

The video doorbell is only compatible with our wireless chime, and not compatible with traditional doorbell chimes. The wireless chime is optional. If it is not installed, doorbell notifications will still go directly to the ToSee app.

1. The Basics

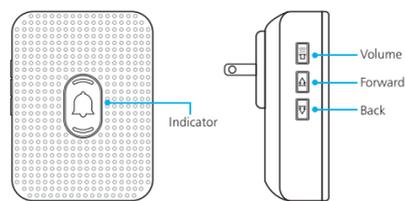



2. Getting Started

Set up your chime with the video doorbell

Step 1

Before the setup process, be sure your video doorbell has connected to your phone and plug in your chime.

8

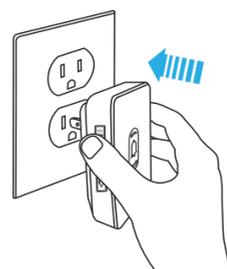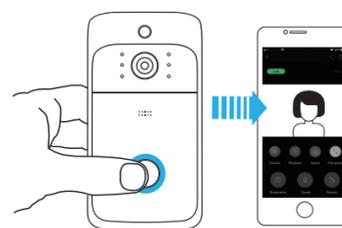



Step 2

Press the forward or back button to cycle through 55 different tunes and select a tune.

Step 3

Press and hold the volume button for 5 seconds until the chime emits a Ding sound and the blue indicator flashes.

9

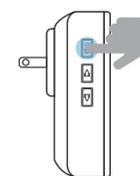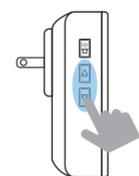


Step 4

Press the doorbell button, the chime emits a Ding sound.

Step 5

Press the doorbell button again, the chime will automatically play the tune you selected.

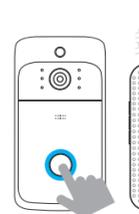

10