WIFI Plug In Thermostat User Manual

**Many thanks for your selection of our products and services, and also for your trust and support to us.**

Search for " Smart RM " or "Smart Life" Download the Wifi App with the following icon.	● Turn on the thermostat, press and hold the key combination " **V** " and " **∧** "untill" **� 🗄** "rapidly flash Activate WIFI distribution network icon

Feature

✧ EU,FR,AU,USA,IT etc socket for choice
✧ 0.5℃ accuracy keeps temperature within the level you set.
✧ Children lock to prevent misoperation by children
✧ weekly programming mode includes: 5+2, 6+1, 7 days three modes, and can be DIY programming.
✧ The classic holiday mode allows you to enjoy a comfortable temperature during your holiday.
✧ Temporary manual mode: In the automatic mode, set the temperature, the thermostat will run for a period according to the set temperature, and then return to the automatic mode

Product Specifications

✧ Power：230Vac 50/60HZ
✧ Probe Sensor：NTC(10k)1%
✧ Current：10A
✧ Limit temperature range：1~70℃
✧ Default setting temperature range：5~35℃
✧ Max. control accuracy：±0.5℃
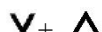
Feature Decription of icons and buttons

☾ Programming mode
👆 Manual mode

👆 Temporary manual mode

🚶 Holiday mode, Holiday days and temperature can be set to run in countdown mode

☀ Heating, icon disappears means stop heating

📶 🗄 WIFI connection, flashing EZ distribution mode

📶x Wifi status: Disconnection

🗄 Cloud icon: flashing,add thermostat to APP with AP mode

🔒 Children lock

Key Function

▦
✧ Short press to set programming mode and manual mode
✧ Long press 3-5 seconds to turn off thermostat
✧ Press to turn on thermostat

V + **∧**
✧ On turn on state,long press 3-5 seconds to connect WIFI

V
✧ Decrease key
✧ Long press to lock or unlock

∧
✧ Increase key
✧ On turn on state,long press 3-5 seconds to enter setting interface
✧ On turn off state,long press 3-5 seconds to enter advanced options

In the programming mode, press **∧** or **V** enter into temporary manual mode

Time setting

On turn on state,long press **∧** 3-5 seconds to enter setting interface,press **∧** or **V** to choose 1,press ▦ to enter time setting,then press ▦ to choose:hour,minute,week, press **∧** or **V** to adjust value. After finishing,press ▦ to return.

Weekly Programmable Setting

5+2 (factory default), 6+1 and 7 models 6 times period setting for user choice.Choose mode in the advanced options. On turn on state,long press **∧** 3-5 seconds to enter setting interface,press **∧** or **V** to choose 2,press ▦ to enter programming setting,then press ▦ to

choose:hour,minute,temperature, press ∧ or ∨ to adjust value. After finishing,press ⊞ to return.

�🏠:	🌤🏠→	🏠←	🏠→	🏠←	🏠🌙
Wake up	Out door	Back home	Out door	Back home	Sleep
6：00 20℃	8：00 15℃	11：30 15℃	13：30 15℃	17：00 15℃	22：00 15℃

The optimum comfort temperature is 18℃-22℃

Holiday mode setting

On turn on state,long press ∧ 3-5 seconds to enter setting interface,press ∧ or ∨ to choose 3,press ⊞ to enter holiday mode setting,then press ⊞ to choose:days and temperature, press ∧ or ∨ to adjust value. After finishing,press ⊞ to return.

Advanced options

On turn off state,long press ∧ 3-5 seconds to enter advanced options, short press ⊞ to choose the option, press ∧ or ∨ to adjust value.After setting finished,keep about 10 seconds will automatic save and exit.

NO	Setting Options	Data Setting Function	Factory Default
A1	Measuring Temperature Calibration	-9-+9℃	−1℃
A2	Start/stop working temperature difference setting	0.5-2.5℃	1℃
A3	Low temperature protection setting	1. 1-10℃ 2. Exceed 10℃, screen display 【--】, low temperature protection was canceled.	5℃
A4	Setting temperature minimum limit	1-10℃	5℃
A5	Setting temperature maximum limit	20-70℃	35℃
A6	Run weekly	0：(5+2)/1：（6+1）/2：（7days）	0：(5+2)
	programming selection		
A7	Run ventilation mode setting(open window)	1：【— —】close ventilation mode(press ∧ to increase temperature and open this mode) 2：10-20℃	— —
A8	Working time of ventilation mode	5-40minutes	20
A9	Backlight brightness when sleep	1：0-8(0 close,1 Darkest,8 brightest)	1
AA	Reset factory setting	Display A o, press ∧ until show all icons	

Wiring and installation instructions

1. Read these instructions carefully. Failure to follow these instructions can result in damage to the product or a hazardous situation.

2. Confirm the maximum load given in the instructions and product, to ensure the product is right for your application.

3. The installer must be a trained and experienced service technician.

4. After the installation completed, follow the steps in these instructions.

⚠️Warning

Live work can cause a short circuit or damage the device

Disconnect power supply before installation